

# boomchair<sup>®</sup>

experience the ultimate level  
of gaming and music

# STEALTH



wireless



# boomchair®

Congratulations!

You are now the proud owner of a BOOMCHAIR®. Prepare to experience your entertainment on a whole new level. BOOMCHAIR® allows you to HEAR the sound and FEEL the excitement. You'll experience every crash, bang, and boom while enjoying your favorite game, music, or movie. BOOMCHAIR® is also a great game seat built to endure the rigors of today's gaming environment. Take a moment to review your owner's manual before connecting your BOOMCHAIR®. Assembly and operation of the BOOMCHAIR® is simple.

If you need further assistance please contact us at [customercare@dream-internet.com](mailto:customercare@dream-internet.com).

Dream Internet Ltd  
Unit 24, North Orbital Commercial Park  
Napsbury Lane, St Albans. AL 1 1XB

## CAUTIONS

### READ BEFORE USE

- DO NOT wash or soak with water. If BOOMCHAIR® gets wet, disconnect power immediately and do not use until completely dry.
- Turn power off and unplug BOOMCHAIR® when not in use.
- Children under 5 years old should not use this product without parental supervision.
- For INDOOR use only/ DO NOT expose to direct sunlight, moisture, or extreme temperatures.
- DO NOT use on slippery or uneven flooring.
- DO NOT use on wood flooring, it may cause scratching.
- DO NOT Mix Old And New Batteries. Do Not Mix Alkaline, Standard (Carbon - Zinc), Or Rechargeable (Nickel - Cadmium) Batteries.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries. Please dispose of batteries safely according to the battery manufacturers instructions or recycle battery per state and local codes. If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with plenty of water. Batteries should be handled under adult supervision. If the device is not to be used for a long period of time, remove the batteries to prevent injury from possible battery leakage.
- Excessive exposure to audio equipment at high volume may lead to hearing loss.
- DO NOT TAMPER WITH OR OPEN

Caution: To reduce the risk of electric shock and fire, do not open the BOOMCHAIR™. There are no user serviceable parts inside. Refer to your warranty for service information.



*Internal*

### FCC part 15.21:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC WARNING

 
This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## SET-UP GUIDE

The BOOMCHAIR™ comes with the following:

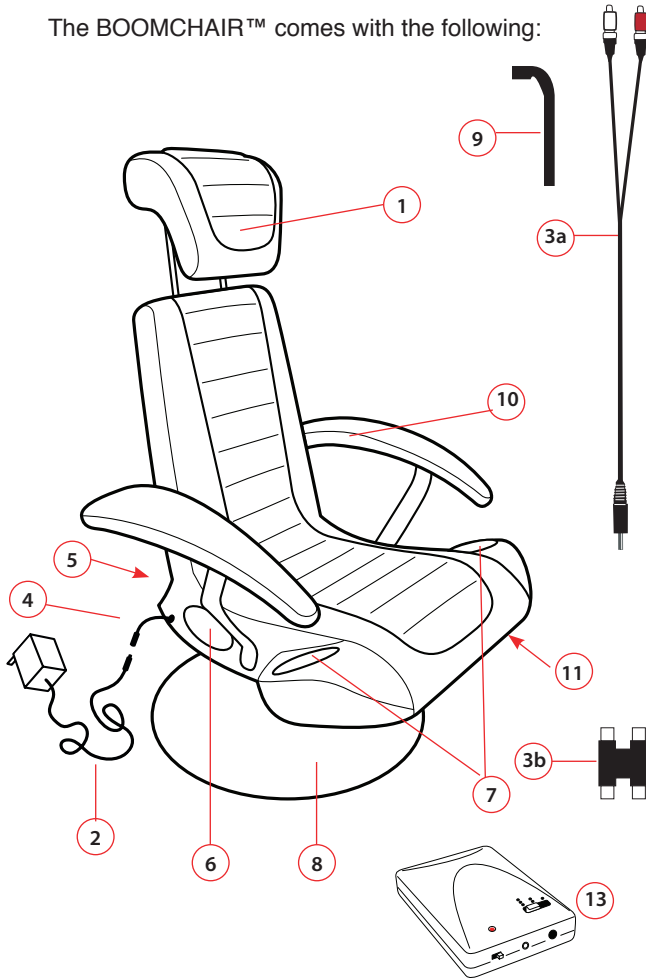

### PARTS LIST:

 
 
- 1) ADJUSTABLE HEADREST
- 2) 12V POWER SUPPLY
- 3a) RCA TO MINI AUDIO CORD  
(headphone jack to audio left & right channel connectors)
- 3b) RCA AUDIO COUPLER
- 4) POWER RECEPTACLE
- 5) HOOK & LOOP FASTENER
- 6) DASHBOARD CONTROL PANEL
- 7) SPEAKERS
- 8) METAL BASE
- 9) ALLEN WRENCH AND 12 HEX SCREWS
- 10) PADDED ARMRESTS
- 11) OWNERS MANUAL
- 12) SWIVEL/SPRING TILT KNOB UNIT WITH POLE
- 13) WIRELESS BOX
- 14) AUDIO CABLE

### SYSTEM SPECS:

Dimensions: 28 in. L x 28 in. W x 41 in. H  
71 cm. L x 71 cm. W x 104 cm. H

2 x 3 in. (7.5 cm) coaxial mid-high speakers @ 3W 4 Ohms  
3 in. (10 cm) sub-woofer speakers @ 15W 4 Ohms

## DASHBOARD CONTROL PANEL

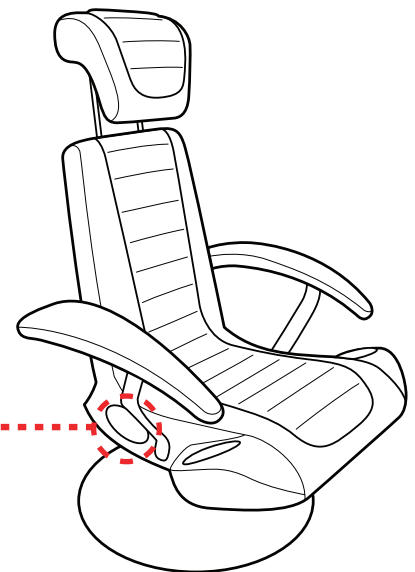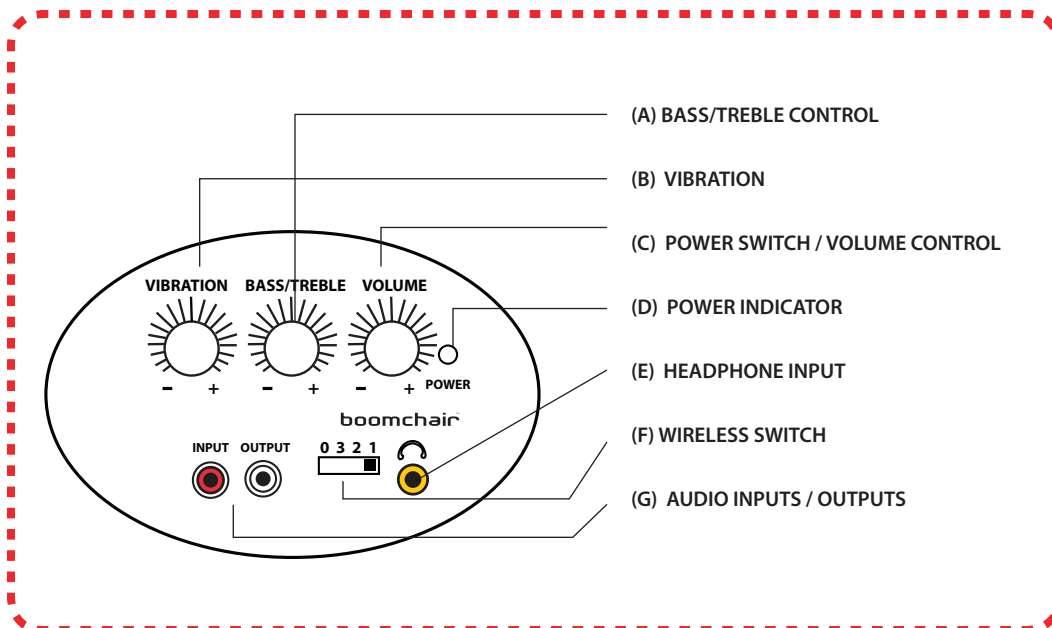

## ASSEMBLY INSTRUCTIONS

Step 1: Secure the SWIVEL/TILT KNOB UNIT to the bottom of chair using 4 screws and the provided allen wrench. Make sure knob is on the front side of the chair as pictured.

Step 2: Insert the pole portion into the metal base and apply pressure or carefully sit in chair to lock in place.

Step 3: Make sure chair is in upright position and secure the hook and loop fasteners on back of chair (part 5)

Step 4: Use allen wrench to attach armrests using 4 screws each.

 
Step 5: Insert headrest by squeezing button on top of back.

Step 6: Insert adapter cord (2) into power receptacle (4).

Step 7: Plug adapter (2) into wall outlet.\*

Step 8: Turn Boomchair™ on by turning Power knob (C) clockwise.

**\*CAUTION: Use only provided adaptor! Different voltage may cause permanent damage.**

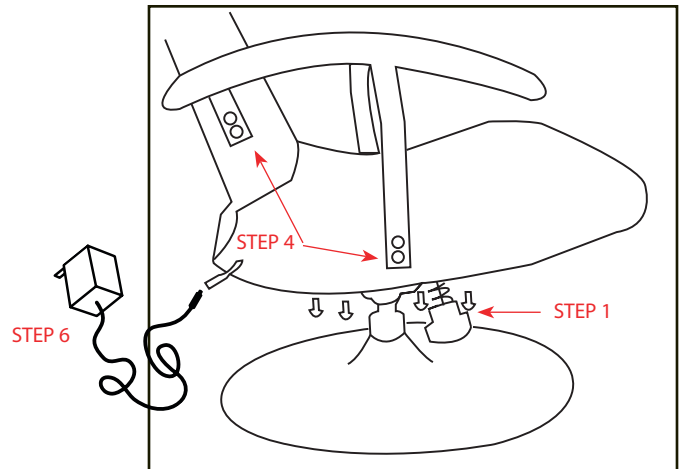

## CONNECTING TO GAME CONSOLES

**Note: Most game consoles are supplied with a custom connector with yellow video out and RCA red/white audio out.**

 
Step 1: Using the console's custom RCA cord, plug yellow composite video cable from game console into video input of TV. (Fig. 1)

Step 1: Connect Audio Coupler (3b) to Red/White RCA cord from game console.

Step 2: Connect one end of RCA cord (3b) into other end of Audio Coupler (3b).

Step 3: Connect single end of audio cord (3a) into INPUT of BoomChair®.

**DIRECT CONNECTION - BE SURE THE WIRELESS CHANNEL SELECTOR IS SWITCHED TO "0"**

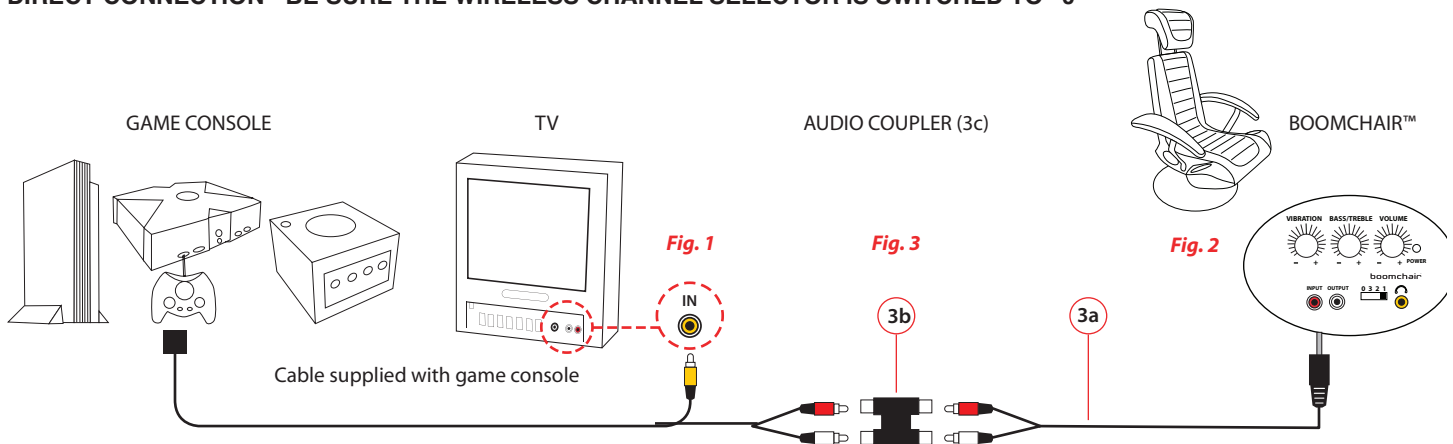


## WIRELESS CONNECTION

Step 1: Connect Audio Coupler (3b) to Red/White RCA cord from game console.

Step 2: Connect red/white end of RCA cord (3a) into other end of Audio Coupler (3b). (Fig. 4)


Step 3: Connect mini audio end of RCA cord (3a) into Wireless Transmitter. (Fig. 5)

 Step 3: Set transmitter and channel switch (F) to matching frequency.

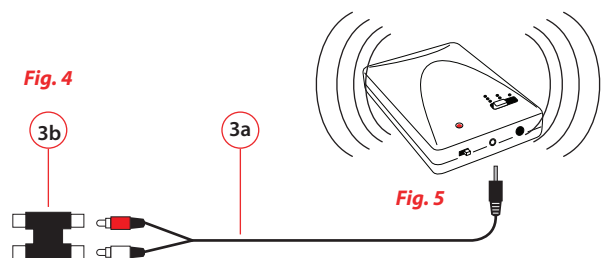

## CONNECTING TO PORTABLE AUDIO / VIDEO DEVICES
 
### DIRECT CONNECTION - BE SURE THE WIRELESS CHANNEL SELECTOR IS SWITCHED TO "0"

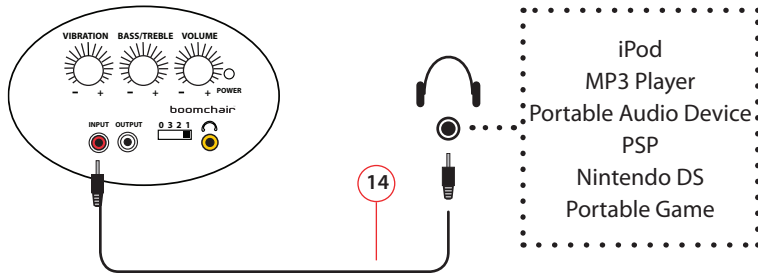


Step 1: Connect one end of AUDIO CABLE (14) into INPUT of BoomChair™.

Step 2: Plug the single end of the AUDIO CABLE into the headphone jack of your device.

Step 3: Turn Boomchair™ on by turning Power knob (C) clockwise.

Step 4: Turn portable device on.

### WIRELESS CONNECTION - BE SURE THE WIRELESS CHANNEL SELECTOR NUMBER ON THE CHAIR MATCHES THE TRANSMITTER WITH CORRESPONDING NUMBER OF DOTS

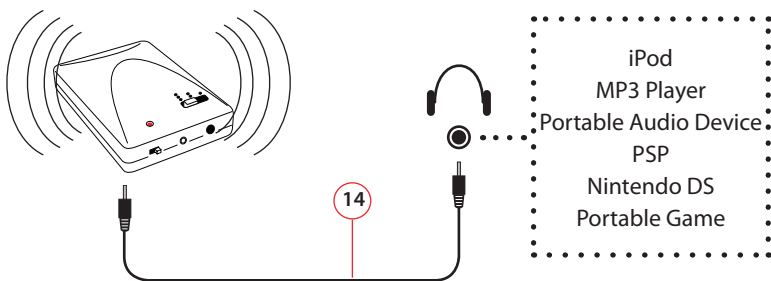 

Step 1: Insert 4 AA batteries (not included) into wireless transmitter. Turn power switch on.

Step 2: Connect one end of the wireless AUDIO CABLE into the wireless transmitter.


Step 3: Connect the other end of the wireless AUDIO CABLE into the headphone jack of your device.

Step 4: Turn Boomchair™ on by turning Power knob (C) clockwise.

Step 5: Set transmitter and Boomchair™ channel switch (F) to matching frequency.

## CONNECTING TO AUDIO / VIDEO DEVICES
 
### DIRECT CONNECTION - BE SURE THE WIRELESS CHANNEL SELECTOR IS SWITCHED TO "0"

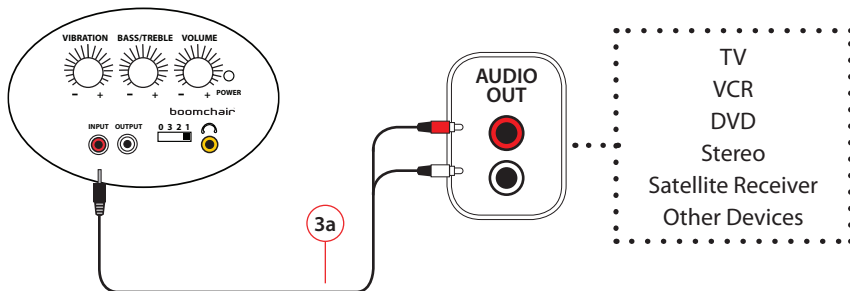


Step 1: Connect the single end of RCA cord (3a) into INPUT of BoomChair™.

Step 2: Connect the other ends of RCA cord (3b) into AUDIO OUTPUT of Audio/Video device.

Step 3: Turn Boomchair™ on by turning Power knob (C) clockwise.

Step 4: Turn Audio/Video device on.

### WIRELESS CONNECTION - BE SURE THE WIRELESS CHANNEL SELECTOR NUMBER ON THE CHAIR MATCHES THE TRANSMITTER WITH CORRESPONDING NUMBER OF DOTS

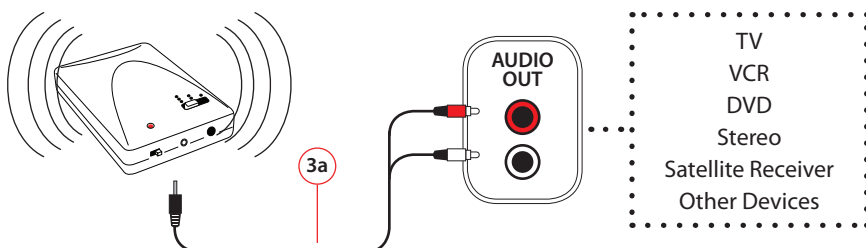 

Step 1: Insert 4 AA batteries (not included) into wireless transmitter. Turn power switch on.

Step 2: Connect single end of RCA cord (3a) into the wireless transmitter.

Step 3: Connect other end of RCA cord (3a) into AUDIO OUTPUT of Audio/Video device.

Step 4: Turn Boomchair™ on by turning Power knob (B) clockwise.

Step 5: Set transmitter and Boomchair™ channel switch (F) to matching frequency.

## DAISY CHAINING CHAIRS TOGETHER

### DIRECT CONNECTION

Step 1: Connect BoomChair™ to any media device as described on pages 4 or 5. This is the first chair.

 
Step 2: Connect one end of AUDIO CORD into OUTPUT of first BoomChair.™

Step 3: Connect other end of AUDIO CORD into INPUT of second BoomChair.™

Step 4: Turn all Boomchairs™ on by turning Power knob (C) clockwise.

Repeat steps 2 and 3 from second chair to connect more BoomChairs.™

Up to 4 chairs can be connected when not using the wireless feature.

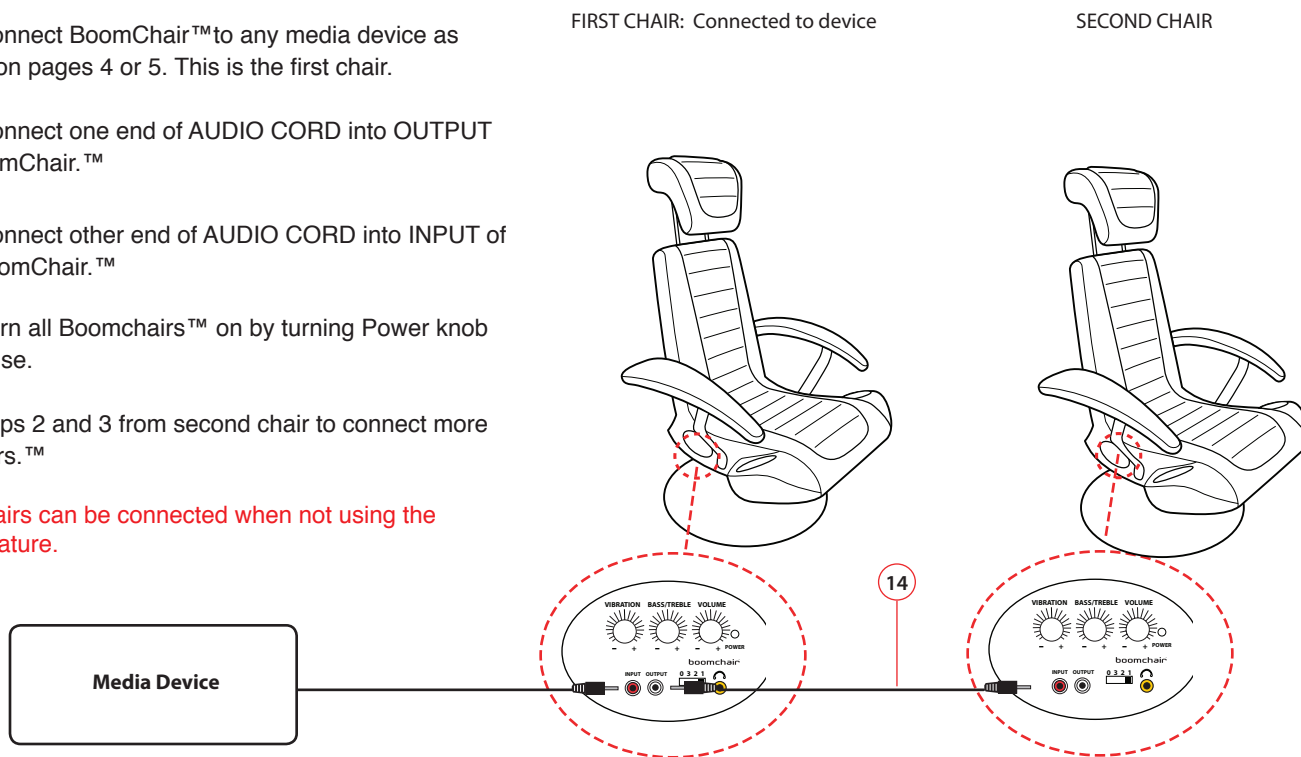

### WIRELESS CONNECTION

Up to 8 chairs can be connected using the wireless method. This requires only one transmitter and all chairs switched to wireless mode.

Step 1: Connect Boomchair to any device using the wireless methods described on pages 4 or 5.

Step 2: Set transmitter and all Boomchair™ channel switches (F) to matching frequency.

Step 3: Turn all Boomchairs™ on by turning Power knob (C) clockwise.

## WIRELESS CONNECTION TIPS

 
Should interference occur, switch the channel on the wireless transmitter using the top slider bar (Fig. 1).

Switch the channel selector on the Boomchair™ (Fig. 2) to the same channel as the transmitter. The number corresponds to the number of dots on the transmitter. Select "0" for non-wireless connections.

Make sure all cables are securely connected.

Make sure batteries are correctly installed in the transmitter, and that the power is on, as indicated by the red LED (Fig. 3).

If you experience static or poor reception from your wireless connection, you may need to select the direct connection method to ensure the best possible sound quality. See page 5.

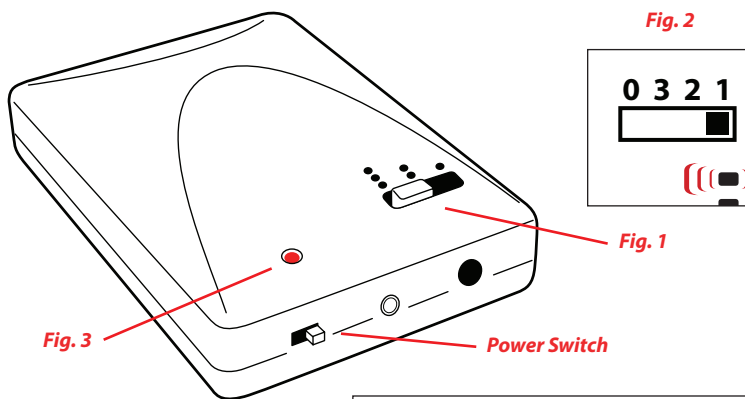

#### WARNING:

DO NOT use the adapter for the CHAIR with this transmitter. It will permanently damage the transmitter and void your warranty. An adapter for the wireless box would have to be purchased separately from your local or online electronics retailer.

## TROUBLESHOOTING BOOMCHAIR™

Q: Why isn't there sound coming from any of my speakers?

A: Ensure your BoomChair® is connected as described in the Assembly Instructions. Check that the power to the unit is on and the volume is turned up. Make sure your audio device is not set to "MUTE" and volume is turned up.

Q: Why isn't there sound coming from one of my speakers?

A: Ensure the audio cord to the BoomChair® is securely connected as described in the Connecting sections. Make sure that both the left and right channel audio inputs and outputs are securely connected to the BoomChair® and audio device. Make sure your audio device is not set to "MUTE" and volume is turned up.

Q: Where can I get more information?

A: Contact us at [customer care@dream-internet.com](mailto:customer care@dream-internet.com).

Contact information: Dream Internet Ltd, Unit 24, North Orbital Commercial Park, Napsbury Lane, St Albans. AL 1 1XB

## MAINTENANCE AND REPAIR

If a problem occurs while using this product, please contact us. DO NOT open unit or attempt to repair on your own. It may result in serious injury from electric shock and void your product warranty.

## CLEANING/CARE INSTRUCTIONS

Fabric: Use a clean cloth to dab lightly with soap and water. DO NOT rub. DO NOT immerse in water. DO NOT use detergent.

**NOTE: PLEASE DO NOT USE ON HARDWOOD FLOORS, IT MAY CAUSE SCRATCHING.**

**[customer care@dream-internet.com](mailto:customer care@dream-internet.com)**

This product is not manufactured or distributed by Microsoft®, the owner of the trademark Xbox™; by Nintendo®, the owner of the trademark Wii™, GameCube™, and DS™; by Sony®, the owner of the trademarks Playstation™ PS3™, PS2™, and PSP™; or by Apple Computer, Inc., the owner of the trademark iPod™.

